

## Tri-AS Quick Guide



- Auto: Trigger or Autosense on
- Override: Trigger or Autosense off → TRI-AS is always on
- Trigger: Trigger on → Autosense off
- Sense: Autosense on → Trigger off  
If there is no signal, the power supply is interrupted after 18-22 minutes.
- Sensitivity: Only when Auto and Sense are activated. Controls the switch-on time in seconds. If no signal is present, the switch-off time is 18 - 22 minutes.
- Analog in: Only when Auto and Sense are activated. Analog input for the audio signal that controls the switching on and off of the TRI-AS. Please use the supplied Y-adapter.